
## 01034 IRRITABLE VOWELS – BATTERY INSTALLATION


## **INSTALLING BATTERIES:**


The Irritable Vowels device requires 3AA batteries. Batteries are not included. The battery compartment cover is located within the Device. Here are the steps to replace the batteries:

1. Locate the two (2) shallow screws on the side of the device as shown below. Use a Phillips Head screwdriver to loosen the two screws (the screws will stay in the cover) and open the Device.

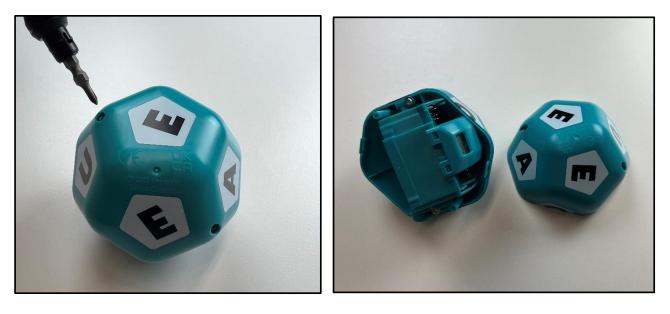


2. Use the screwdriver to remove the battery compartment cover.

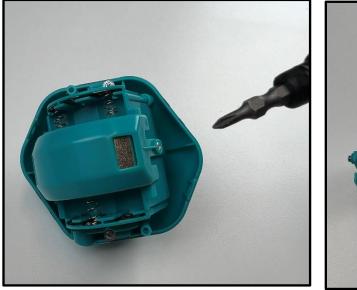

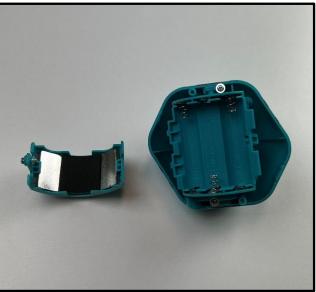

## 01034 IRRITABLE VOWELS – BATTERY INSTALLATION

3. Install 3 fresh AA Batteries. Make sure the "+" and "-" ends are inserted correctly, as indicated in the battery compartment. Replace the battery compartment cover and close the Device. Do not over-tighten the screws.

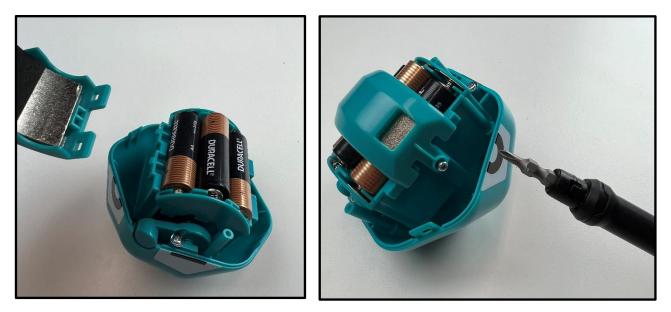

4. Close the device using the curved button notch on the edge as a guide. Do not overtighten the screws.

